




HOSPITAL MEDICAL MOBILE UNITS



We are pleased to introduce the new line of mobile hospital units entirely manufactured by **ESSE 3 MEDICAL EQUIPMENT**, line that supports and complements the range of our traditional products for the complete equipment of hospitals, clinics, care centers, analysis laboratories .

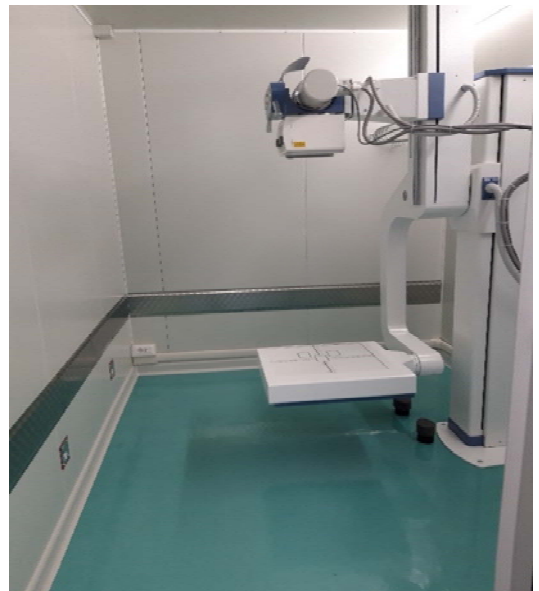


The images show the **RADIOLOGICAL MOBILE UNIT**, with a fully sealed diagnostic room (pavement and walls), but the line also includes mobile units for cardiology, ophthalmology, mammography, stomatology, medical imaging (CT scanner and ultrasound) as well as operating units with sterilization and REA for field surgery.



Indeed we can equip the units, whose bearing structure uses HC containers 20 and 40 feet, according to customer requirements to customize according to your needs.



The insulation of walls , ceiling and pavement are made of antitoxic and 4 cm thick fireproof material which guarantees the thermal and acoustic insulation of the internal environment (diagnostic and examination rooms) with a TOP level finishing standard.

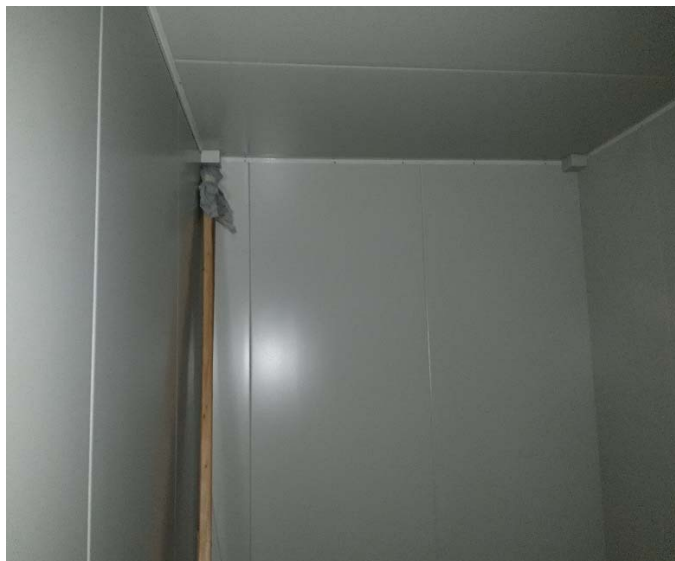

The floors are treated with special vitrified resin, the same used in operating theaters and hospital ambients in general, characterized by easy cleaning and disinfection.




The electrical installation, completely up to standard with protection circuit breakers and separate power lines, ensures the illumination and power of the devices and equipment inserted into the unit for the safety of operators and patients



The units can be equipped with a generator (coupled with a UPS according to backup group) to make them autonomous from an energy point of view, air conditioning with possibility cold / hot, hygienic services and all the comforts typical of a traditional fixed hospital structure.



The units are equipped with movable ramp, actuated by electric jack, for the access of the stretcher trolleys and they can be interconnected to realize a complete mobile poli-diagnostic center and / or an "off-road" hospital to be placed in rural areas or in case of natural calamities or conflicts

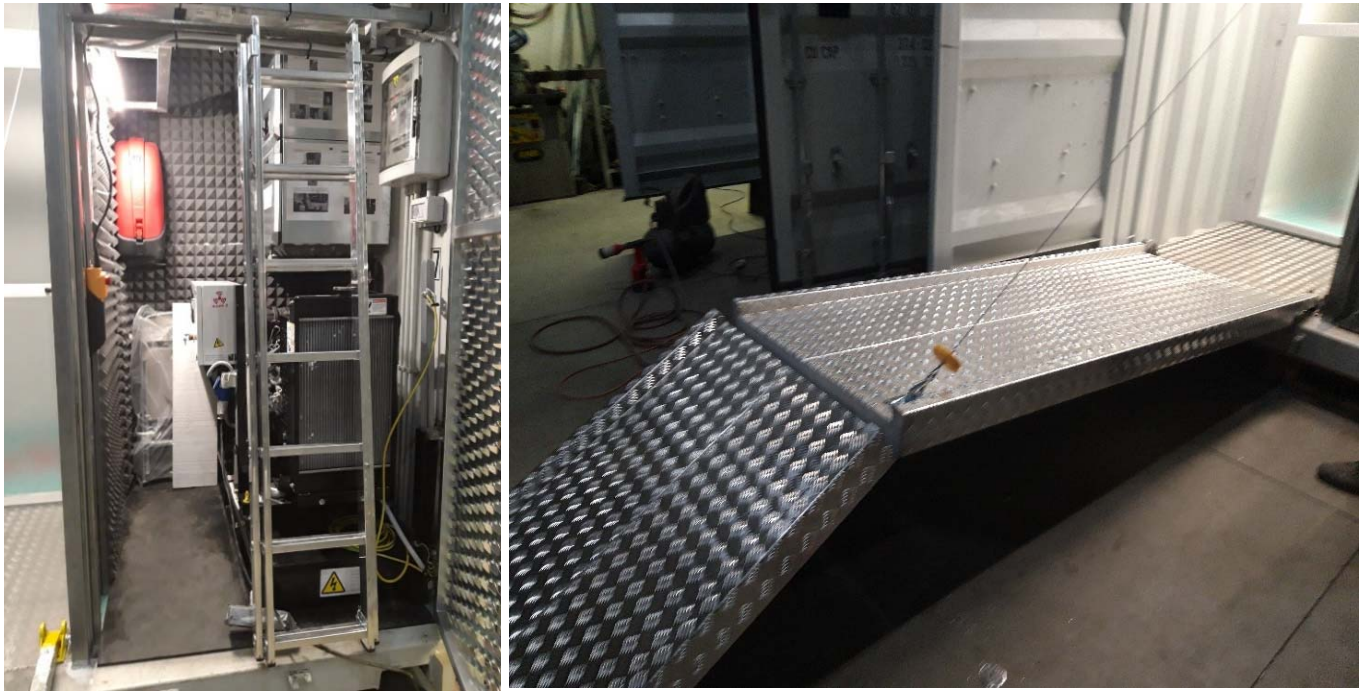

ESSE3 srl, Via Garibaldi 30
14022 Castelnuovo D.B. (AT)
Tel +39 011 99 27 706
Fax +39 011 99 27 506
e-mail esse3@chierinet.it
web: www.

