

Surgical washbasin **ES-DUO/E** Electronic control

Molded in one block without any connection or gluing, the **ES-DUO/E** aseptic surgical washbasin with two washing stations allows washing up to the elbows thanks to its wide and deep tank.

The enveloping shapes provide anti-splash protection from the environment, avoiding water stagnation and the risk of bacterial development.

Without overflow, with protective wall backsplash and rounded shapes with internal sloping.
Stainless steel frame and HDPE supply hoses resistant to chlorination.

Material: Reinforced polyester resin, reinforced on stress areas with white Iso NPG gelcoat coating of sanitary grade.

Departments concerned: Operating room, resuscitation, nephrology, hemodialysis, emergency box, surgeons' preparation room.



Control type:
Infrared electronics


Standard equipment

- 2 IR cells triggered by presence detection
- + Power supply of your choice by batteries or mains.
Delivered 2 in 1
- + System equipped with automatic purge (6h/12h/Off)
- + Simplified adjustment on the front via remote control
- + EV box easy to unclip for maintenance
- ✓ 2 removable swan necks in chrome-plated brass
- ✓ 1 Ø40mm drain and siphon
- ✓ 1 Flow limiter valve
- ✓ Connection hoses
- ✓ Stainless steel wall mounting kit



Dimensions

L : 1500 mm
H : 745 mm
P : 570 mm
Poids : 19 Kg

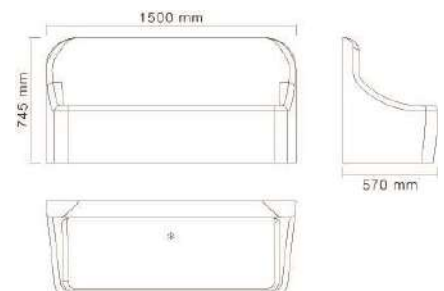

Optional accessories

- ✓ Straight spouts
- ✓ Thermostatic mixer + Anti-scald safety
- ✓ Pre-filtration kit with 1µ cartridge
- ✓ 0.2µ terminal filter all germs 62 days
- ✓ Aluminum accessory support rail
- ✓ Mechanical soap/SHA dispenser with elbow
- ✓ Electronic soap/SHA dispenser
- ✓ Paper dispenser
- ✓ 40W ultraviolet water disinfection kit
- ✓ Nail brush dispenser surgical
- ✓ Basket for hygiene accessories

HOSPITAL SANITARY RANGE

Surgical washbasin **ES-DUO/F** Femoral control

Molded in one block without any connection or gluing, the **ES-DUO/F** aseptic surgical washbasin with two washing stations allows washing up to the elbows thanks to its wide and deep tank.

The enveloping shapes provide anti-splash protection from the environment, avoiding water stagnation and the risk of bacterial development.

Without overflow, with protective wall backsplash and rounded shapes with internal sloping.
Stainless steel frame and HDPE supply hoses resistant to chlorination.

Material: Reinforced polyester resin, reinforced on stress areas with white Iso NPG gelcoat coating of sanitary grade.

Departments concerned: Operating room, resuscitation, nephrology, hemodialysis, emergency box, surgeons' preparation room.

Control type:
Femoral mechanism




Standard equipment

- 2 Timed femoral controls (kneeling)
- 2 removable swan necks in chrome-plated brass
- 1 Ø40mm drain and siphon
- 1 Flow limiter valve
- Connection hoses
- Stainless steel wall mounting kit



Dimensions

L : 1500 mm
H : 745 mm
P : 570 mm
Poids : 19 Kg

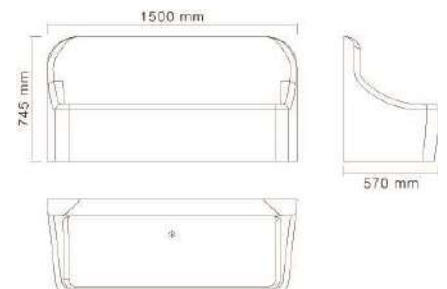

Optional accessories

- ✓ Straight spouts
- ✓ Thermostatic mixer + Anti-scald safety
- ✓ Pre-filtration kit with 1µ cartridge
- ✓ 0.2µ terminal filter all germs 62 days
- ✓ Aluminum accessory support rail
- ✓ Mechanical soap/SHA dispenser with elbow
- ✓ Electronic soap/SHA dispenser
- ✓ Paper dispenser
- ✓ 40W ultraviolet water disinfection kit
- ✓ Nail brush dispenser surgical
- ✓ Basket for hygiene accessories



HOSPITAL SANITARY RANGE

Surgical washbasin **ES-DUO/C** Elbow control

Molded in one block without any connection or gluing, the **ES-DUO/C** aseptic surgical washbasin with two washing stations allows washing up to the elbows thanks to its wide and deep tank.

The enveloping shapes provide anti-splash protection from the environment, avoiding water stagnation and the risk of bacterial development.

Without overflow, with protective wall backsplash and rounded shapes with internal sloping. Stainless steel frame and HDPE supply hoses resistant to chlorination.

Material: Reinforced polyester resin, reinforced on stress areas with white Iso NPG gelcoat coating of sanitary grade.

Departments concerned: Operating room, resuscitation, nephrology, hemodialysis, emergency box, surgeons' preparation room.

Control type:

Elbow mechanism

Allows manual adjustment of hot and cold water




Dimensions

L : 1500 mm

H : 745 mm

P : 570 mm

Poids : 19 Kg

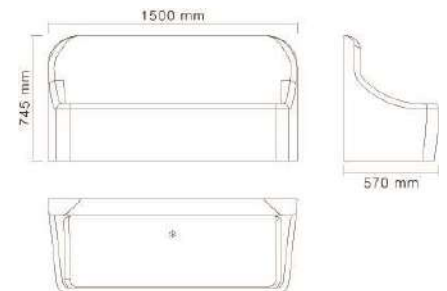

Standard equipment

- 2 Elbow control mixer taps – L 160mm
+ 10 year warranty
- 1 Ø40mm drain and siphon
- 1 Flow limiter valve
- Connection hoses
- Stainless steel wall mounting kit

Optional accessories

- ✓ Pre-filtration kit with 1µ cartridge
- ✓ 0.2µ terminal filter for all germs 62 days
- ✓ Aluminum rail for accessories support
- ✓ Mechanical elbow soap/SHA dispenser
- ✓ Electronic soap/SHA dispenser
- ✓ Paper dispenser
- ✓ 40W ultraviolet water disinfection kit
- ✓ Surgical nail brush dispenser
- ✓ Basket for hygiene accessories



HOSPITAL SANITARY RANGE

Surgical washbasin **ES-DUO/E** Electronic control - Straight spout

Molded in one block without any connection or gluing, the **ES-DUO/E** aseptic surgical washbasin with two washing stations allows washing up to the elbows thanks to its wide and deep tank.

The enveloping shapes provide anti-splash protection from the environment, avoiding water stagnation and the risk of bacterial development.

Without overflow, with protective wall backsplash and rounded shapes with internal sloping. Stainless steel frame and HDPE supply hoses resistant to chlorination.

Material: Reinforced polyester resin, reinforced on stress areas with white Iso NPG gelcoat coating of sanitary grade.

Departments concerned: Operating room, resuscitation, nephrology, hemodialysis, emergency box, surgeons' preparation room.

Control type:
Infrared electronics




Standard equipment

- 2 IR cells triggered by presence detection
- + Power supply of your choice by batteries or mains.
Delivered 2 in 1
- + System equipped with automatic purge (6h/12h/Off)
- + Simplified adjustment on the front via remote control
- + EV box easy to unclip for maintenance
- 2 removable straight spouts in chrome-plated brass
- 1 Ø40mm drain and siphon
- 1 Flow limiter valve
- Connection hoses
- Stainless steel wall mounting kit



Dimensions

L : 1500 mm
H : 745 mm
P : 570 mm
Poids : 19 Kg

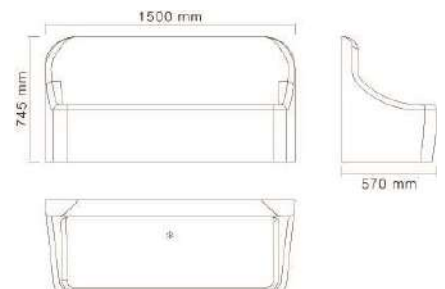

Optional accessories

- Straight spouts stainless steel declipsable autoclavable
With self-sealing connection
- Thermostatic mixer + Anti-scald safety
- Pre-filtration kit with 1µ cartridge
- 0.2µ terminal filter all germs 62 days
- Aluminum accessory support rail
- Mechanical soap/SHA dispenser with elbow
- Electronic soap/SHA dispenser
- Paper dispenser
- 40W ultraviolet water disinfection kit
- Nail brush dispenser surgical
- Basket for hygiene accessories